


## When performing any wheel maintenance ensure to...

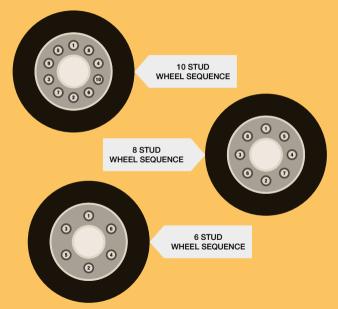

## Check the wheel for:

- Wear, dents and damage
- Cracks radiating from the stud holes, ventilation holes, outer flange or centre bore
- Stud hole elongation
- Corrosion, particularly around stud holes, mating faces, ventilation holes and welds

## Check the studs and nuts for:

- Corrosion
- Damaged, cracked or stretched threads
- Damaged, cracked or cracked washers and nuts

